



JOHNNYFPV
FPV AIRFRAME

QAV-S SPECIAL
EDITION



ASSEMBLY GUIDE





1

USE THE SPLIT PLATE TOP, THE X ISOLATION PLATE AND 4 X 25MM SCREWS TO SECURE BOTH PLATES.

2

USE THE SPLIT PLATE BOTTOM, THE ARM SUPPORT WEDGES, AND 2 X 12MM SCREWS TO COMPLETE THE BOTTOM PLATES ASSEMBLY.

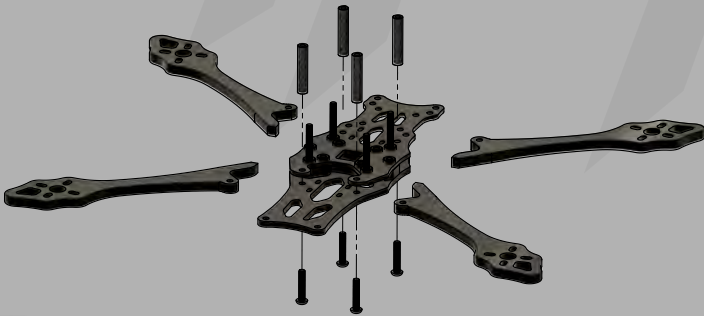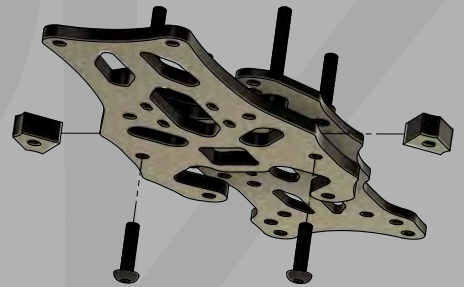


3

AFTER ASSEMBLING THE BOTTOM PLATE SYSTEM, SLIDE IN THE 4 ARMS AND SECURE THEM WITH 4 X 25MM STANDOFF AND 4 X 16MM SCREWS.

4

PLACE THE ALUMINUM CAMERA PLATES AND 2 X 25MM STANDOFF, SECURE THEM WITH 4 X 6MM SCREWS.

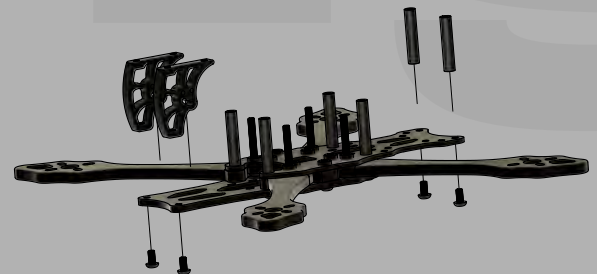

ASSEMBLY GUIDE

CAMERA PLATES




USE THE CAMERA PLATE
ORIENTATION ABOVE FOR MINI
(23MM WIDE) FPV CAMERAS



USE THE CAMERA PLATE
ORIENTATION ABOVE FOR MICRO
(20MM WIDE) FPV CAMERAS

ASSEMBLY GUIDE

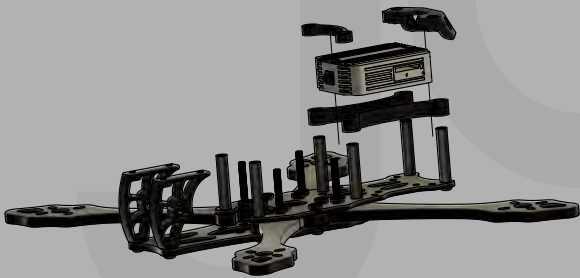


5

MOUNT AND SECURE THE DJI AIR UNIT WITH THE CUSTOM MOLDED FOAM, AND USE THE ANTENNA HOLDER WITH THE RUBBER O-RING TO MOUNT THE ANTENNAS IN PLACE.


6

SECURE THE TOP PLATE TO THE STANDOFF AND CAMERA PLATES BY USING 6 X 6MM COUNTERSINK SCREWS.

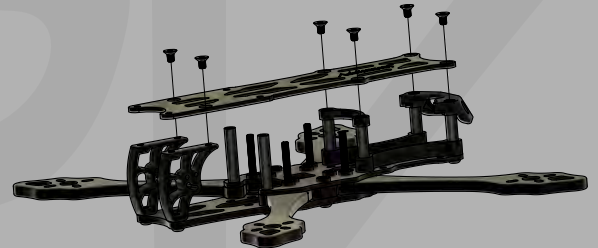


7

ASSEMBLE THE HD ISOLATION SYSTEM BY USING THE PLATE, 4 X ISOLATION T-SPACERS, 4 X SILICON RUBBER GROMMETS AND 4 X 12MM SCREWS.

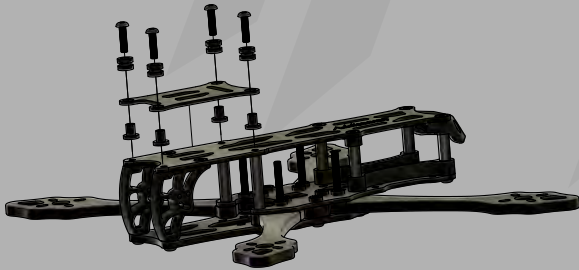

8

WRAP UP THE ASSEMBLY BY STICKING THE HD CAMERA FOAM WEDGE AND THE SILICONE BATTERY PAD TO THE TOP PLATE.

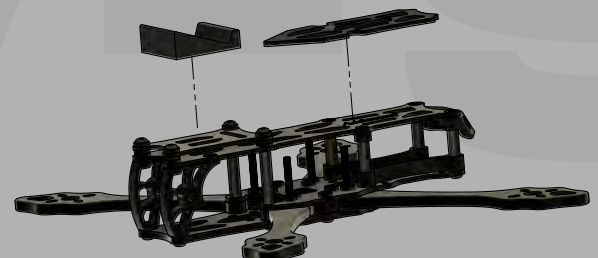

JOHNNY/FPV
FPV AIRFRAME



QAV-S SPECIAL EDITION