


FIRST STEP:


Install the 22mm standoffs to the bottom plate using the M2X8mm screws.



SECOND STEP:


Insert the camera plates to the bottom plate, making sure the camera plates follow the correct orientation.

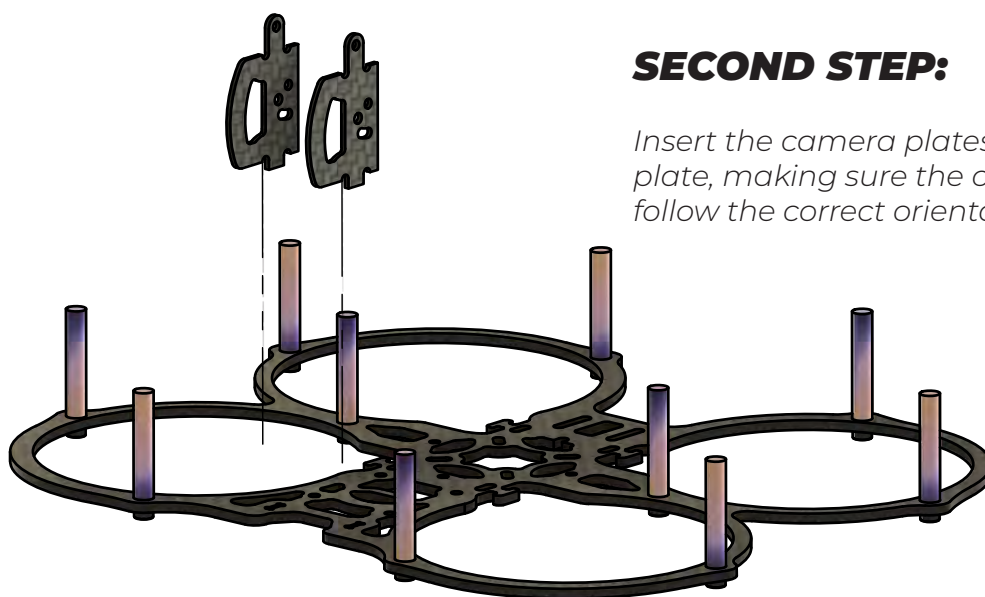

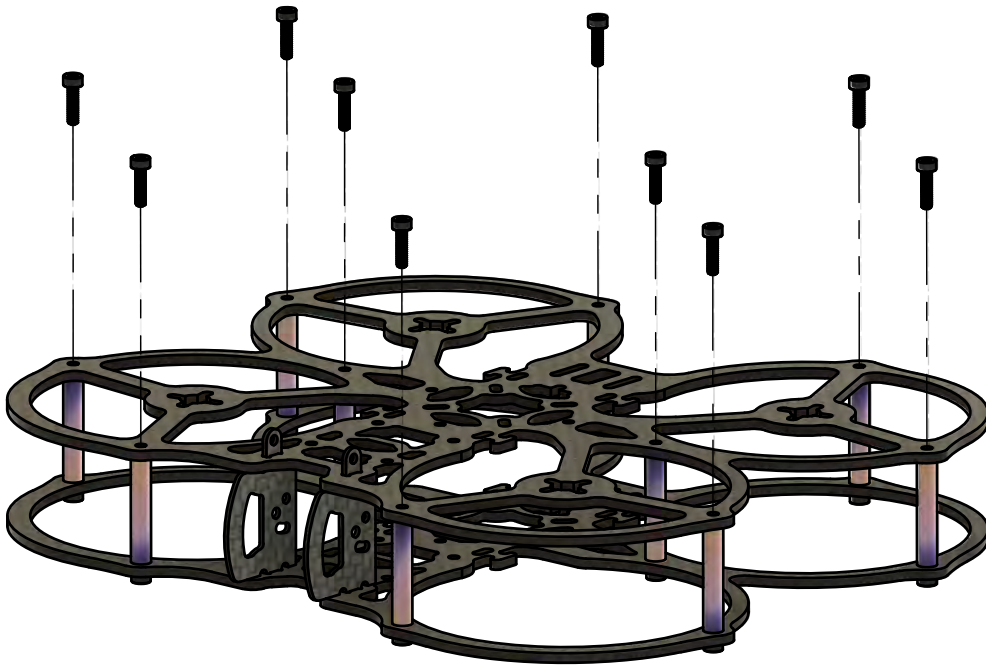

THIRD STEP:

Install the top plate and slide in the camera plates, then use the M2x8mm screws to secure the plate.

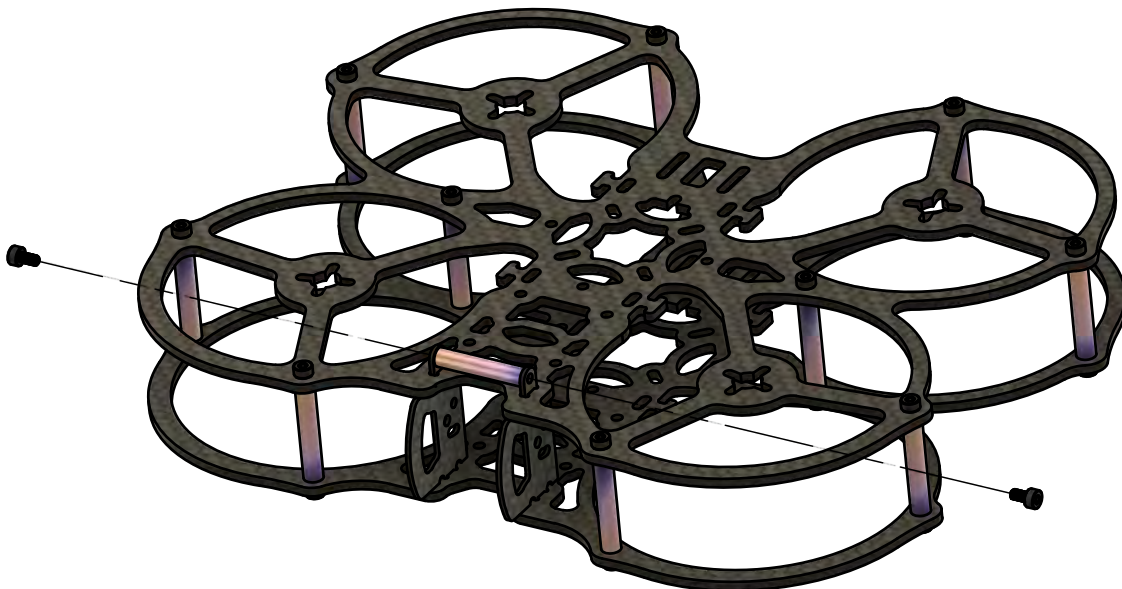

FOURTH STEP:

Install the horizontal standoff between the camera plates and secure it with M2x4mm screws.